

Shot Master Datasheet

1. Machine configuration and overall dimensions



Shotmaster c/ST

Technical data				
Brew chamber	2 x 24 g			
Grinder	2 x Steel burrs - 64 mm			
User Interface	1 x Touch screen 256 mm (10.1'')			
Bean hopper	2 x 1.5 kg			
Coffee outlet height*	190 mm max.			
Hot water outlet height*	160 mm max. or 215 mm max. (option)			
Interface	2 x USB, 1 x Ethernet, 1 x CCI/CSI			
Cup heater surface	-			
Coffee boiler size	2 x 1.5 L			
Steam boiler size	-			
Grounds drawer	1 x 700 g			
Drip tray	Standard			
Water Connection				
Water hose	Inox braided pipe G3/8" female x 2 m			
Drain hose	Ø 22 mm x Ø 16 mm x 2 m			

Super Traditional	Shotmaster c					
Weight	66 kg					
Performance (up to)						
Espresso/h (23 s)	350					
Hot water/h (200 ml)	170					
Cappuccino/h (23 s)	-					
Adjustable hot water temperature (Manual)	-					
Adjustable hot water temperature (Automatic)						
e'Foam Micro Air Dosing (MAD) system (controlled electronically)	-					
Milk system with EMT (Electronic Milk Texturing)	-					
Voltage/Power						
Power consumption (standby mode)	Less than 2 W					
2/PE, 208V~, 60Hz, 30A	4600 W					
Water pressure and flow						
2.5 - 4 bars (36.3 - 58 psi) If the pressure exceeds 4 bars (58 psi), it is necessary to install a pressure valve reducer.						
To avoid damage to the water pump, a water flow rate of at least 150 l/h (2.5 l/min) must be ensured at the water inlet of the machine.						

*measured from the drip tray





Ecoparc de Daval A2 • 3960 Sierre • Switzerland • +41 27 588 00 17 • techsupport@eversys.com • www.eversys.com



Shot Master

2. Prior to the installation READ SAFETY INSTRUCTIONS

- Check water quality and pressure
- Define filter type and size and check space inside counter
- If no descaling cartridge is used, install carbon filter as minimum
- Check that the machine is on flat and stable surface
- Check counter cut out
- Check water supply installation
- Check that power supply conforms to local standards


3. After installation

- Explain cleaning and instruct staff using Quick Reference Card (QRC). Download here: <u>https://bit.ly/2VYO08O</u>.
- Save the machine data to an USB stick and send it to <u>data-upload@eversys.com</u>. Refer to: <u>https://bit.ly/3yTzsWo</u>.

4. Desk preparation and countertop cut out dimensions


- Download the pre-commissioning requirements check list here: <u>https://bit.ly/3CQ4zop</u>.
- Download the 1:1 scale countertop cutout here: <u>https://bit.ly/3xT5TTM</u>.

Min. height required to refill/remove bean hopper

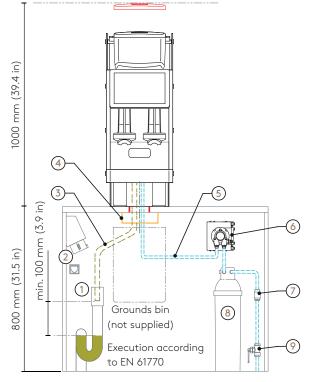

- 1. Drain with siphon, input min. Ø 56 mm.
- Electrical socket according to local regulation and RJ-45 connection (e'Connect).
- 3. Drain hose Make sure that there is no dip or any back pressure in the hose. The hose must always flow downwards.
- Undercounter ground coffee disposal (option).
 Main water braided pipe.
- 6. External water pump.
- Check valve according to local regulation.
- 8. Descaling cartridge or carbon filter as minimum.
- 9. Pressure reducer output Only if water pressure exceeds
- 4 bars (58 psi).
- 10. Water inlet 3/8".

(i) Refer to the commissioning manual (<u>https://bit.ly/3D4FuGm</u>) for more information.

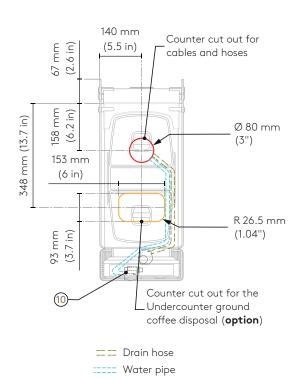

Water quality recommendation

Total hardness: 5 - 8° dGH (89-142 ppm) Carbonate hardness: Max. 6° dKH (107 ppm) pH value: ideal 7.0 - 7.2

Y	our local d	listribut	or:		

Ecoparc de Daval A2 • 3960 Sierre • Switzerland • +41 27 588 00 17 • techsupport@eversys.com • www.eversys.com

- Check that power supply conforms to the machine settings
- Check that the machine is the only device on this power line
 - Check all with customer on site
 - Make sure original coffee is available
 - Check drink recipes and cup sizes