



# 1. Machine configuration and overall dimensions



Shotmaster ms/ST

Technical data	
Brew chamber	2 x 24 g
Grinder	2 x Steel burrs - 64 mm
User Interface	1 x Touch screen 256 mm (10.1")
Bean hopper	2 x 1.5 kg
Coffee outlet height*	190 mm max.
Hot water outlet height*	160 mm max. or 215 mm max. (option)
Interface	2 x USB, 1 x Ethernet, 1 x CCI/CSI
Cup heater surface	Up to 64 espresso cups
Coffee boiler size	2 x 1.5 L
Steam boiler size	5.4 L
Grounds drawer	1 x 700 g
Drip tray	Standard or Large (option) or Large with pitcher rinsers (option)
Water Connection	
Water hose	Inox braided pipe G3/8" female x 2 m
Drain hose	Ø 22 mm x Ø 16 mm x 2 m

*measured from	the drip to	ray
----------------	-------------	-----

Super Traditional	Shotmaster s	Shotmaster ms		
Weight	101 kg	105 kg		
Performance (up to)				
Espresso/h (23 s)	350			
Hot water/h (200 ml)	170			
Cappuccino/h (23 s)**	-	350		
Adjustable hot water temperature (Manual)	Yes			
Adjustable hot water temperature (Automatic)	Option			
e'Foam Micro Air Dosing (MAD) system (controlled electronically)	Yes			
Milk system with EMT (Electronic Milk Texturing)	-	Yes		
Voltage/Power				
Power consumption (standby mode)	Less than 2 W			
2/PE, 208V~, 60Hz, 30A	4600 W			
Water pressure and flow				
2.5 - 4 bars (36.3 - 58 psi) If the pressure exceeds 4 bars (58 psi), it is necessary to install a pressure valve reducer.				
To avoid damage to the water pump, a water flow rate of at least 200 I/h (3.4 I/min) must be ensured at the water inlet of the machine.				

<sup>\*\*</sup>milk is dispensed through the 1.5-Step





717 mm (28.2 in) with large drip tray

743 mm (29.2 in)



#### 2. Prior to the installation READ SAFETY INSTRUCTIONS


- Check water quality and pressure
- Define filter type and size and check space inside counter
- If no descaling cartridge is used, install carbon filter as minimum •
- Check that the machine is on flat and stable surface
- Check counter cut out
- Check water supply installation
- Check that power supply conforms to local standards
- Check that power supply conforms to the machine settings
- Check that the machine is the only device on this power line
- Check all with customer on site
- Make sure original coffee is available
- Make sure cold milk is available (option)
- Check drink recipes and cup sizes
- Check that a milk pitcher is available.


### 3. After installation

- Explain cleaning and instruct staff using Quick Reference Card (QRC). Download here: https://bit.ly/2VYO08O.
- Save the machine data to an USB stick and send it to <u>data-upload@eversys.com</u>. Refer to: <u>https://bit.ly/3yTzsWo</u>.

## 4. Desk preparation and countertop cut out dimensions

- Download the pre-commissioning requirements check list here: <a href="https://bit.ly/3CQ4zop">https://bit.ly/3CQ4zop</a>.
- Download the 1:1 scale countertop cutout here: <a href="https://bit.ly/3xT5TTM">https://bit.ly/3xT5TTM</a>.

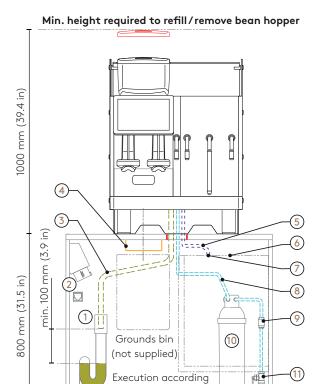

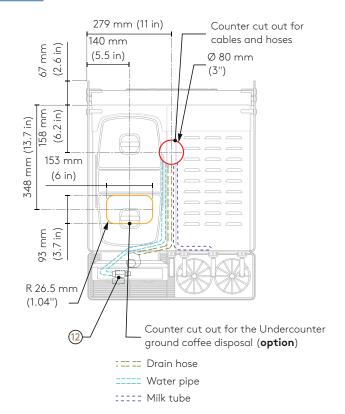

- 1. Drain with siphon, input min. Ø 56 mm.
- 2. Electrical socket according to local regulation and RJ-45 connection (e'Connect).
- Drain hose Make sure that there is no dip or any back pressure in the hose. The hose must always flow downwards.
- 4. Undercounter ground coffee disposal (option).
- 5. Cut milk tubes as short as possible.
- 6. Place the fridge as close as possible to the machine.

to EN 61770

- 7. Drill hole according to instruction of refrigerator manufacturer.
- 8. Main water braided pipe.
- 9. Check valve according to local regulation.
- 10. Descaling cartridge or carbon filter as minimum.
- 11. Pressure reducer output Only if water pressure exceeds 4 bars (58 psi).
- 12. Water inlet 3/8".
- Refer to the commissioning manual (<u>https://bit.ly/3D4FuGm</u>) for more information.

#### Water quality recommendation

Total hardness: 5 - 8° dGH (89-142 ppm) Carbonate hardness: Max. 6° dKH (107 ppm) pH value: ideal 7.0 - 7.2

Your local distributor: